


# Hawarden

## Radio Mandatory Zone (RMZ)

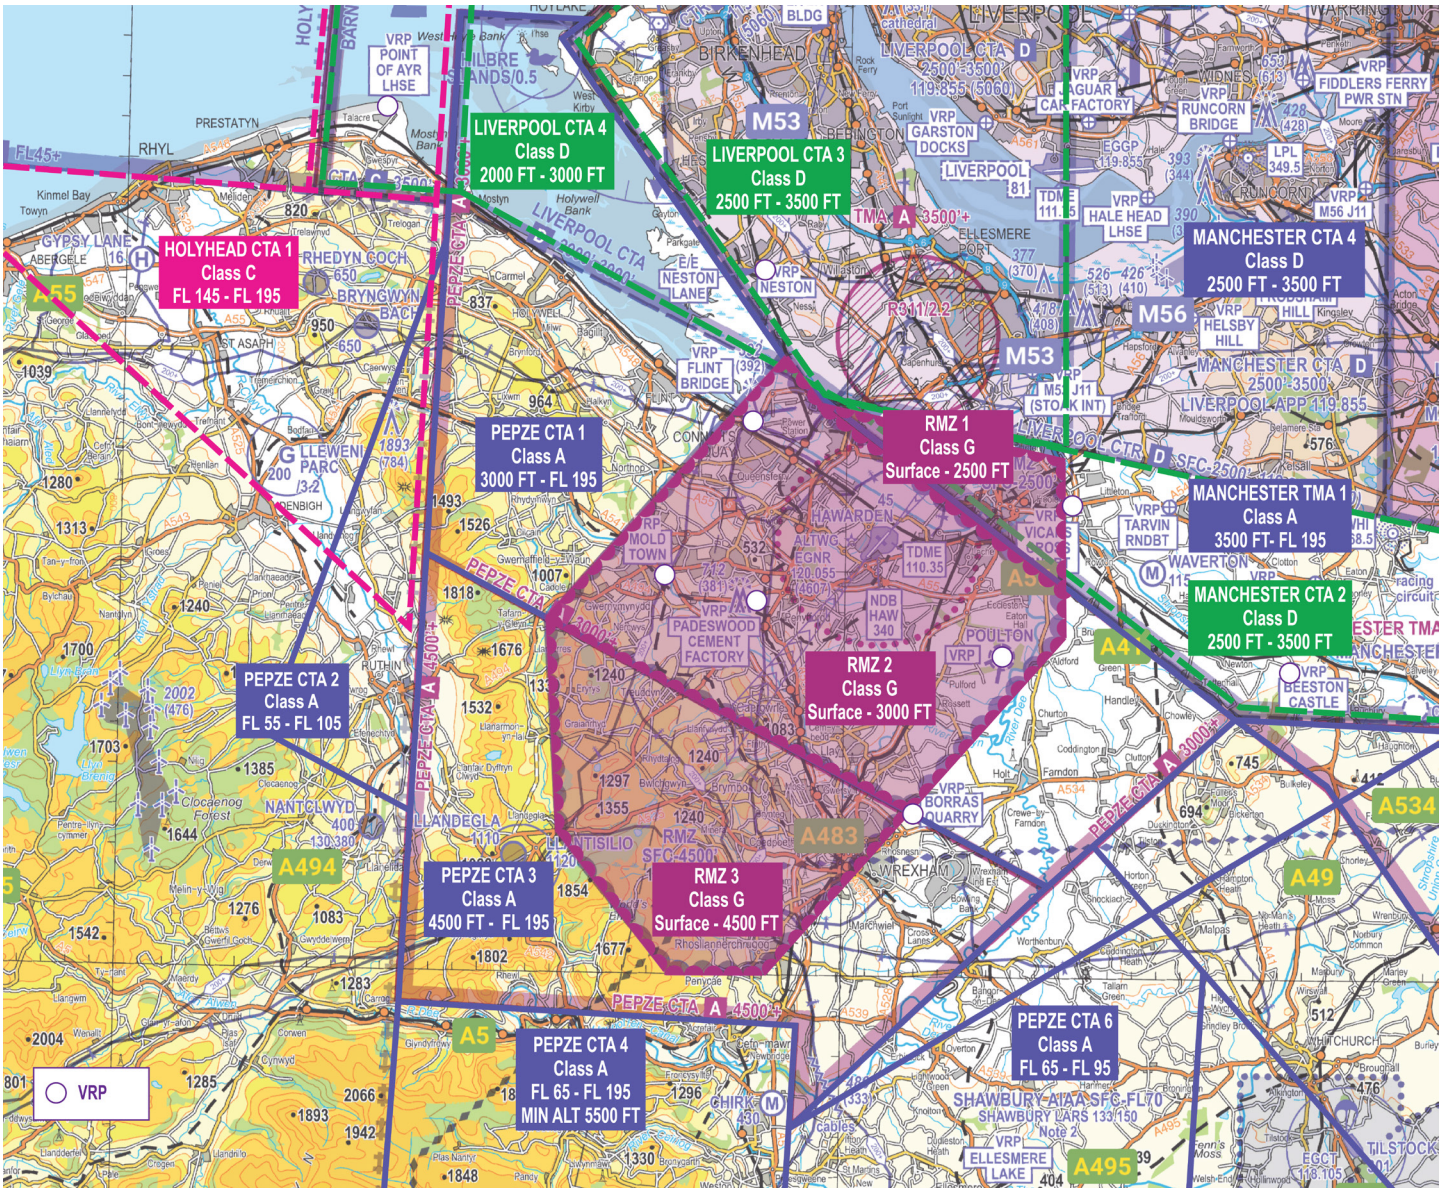

### Hawarden Radar

Phone 01244 522012  
 SMS 07786 208 291  
 Email [atcopshawarden@airbus.com](mailto:atcopshawarden@airbus.com)

Frequency **120.055 MHz**  
 Frequency Monitoring Code (FMC) **4607**

Check the Radio Mandatory Zone requirements before your flight.

# To fly within the Hawarden RMZ you need to:


- Radio** Establish 2-way communication with Hawarden Radar, provide flight details before entering, and maintain communication within the RMZ.
- FMC** Display Hawarden FMC (4607) with mode C (if available) while monitoring Hawarden Radar on 120.055 MHz before and within the RMZ.
- No-radio** Contact Hawarden ATC by phone, text, or email before flights entering or crossing the RMZ.
- Letter of Agreement** Follow the guidelines of a valid letter of agreement.

## Hawarden Radar contact

Phone 01244 522012  
SMS 07786 208 291  
Email [atcopshawarden@airbus.com](mailto:atcopshawarden@airbus.com)  
Frequency 120.055 MHz  
FMC 4607

## Visual Reference Points (VRPs)

Help identify the RMZ boundaries and use as a guide to know when to contact Hawarden Radar, or select the correct frequency monitoring code.

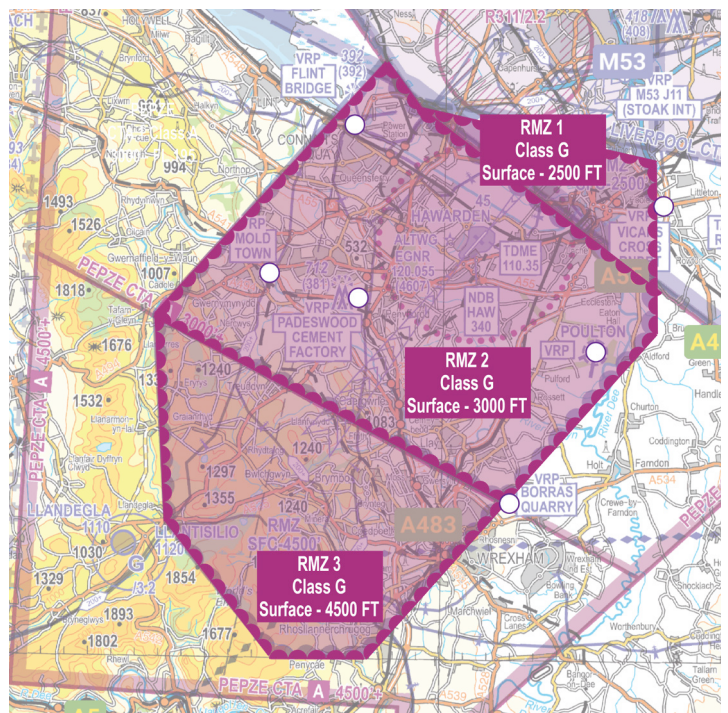

## Outside the RMZ

Beeston Castle	530742N 0024131W	5.7 NM from RMZ boundary
Vicars Cross Roundabout	531142N 0025038W	0.22 NM from RMZ boundary
Borras Quarry	530406N 0025706W	on the RMZ boundary
Point of Ayr Lighthouse	532125N 0031920W	11.4 NM outside the boundary

## Inside the RMZ

Padeswood Cement Factory	530916N 0030342W	2.85 NM within RMZ boundary
Poulton Disused Airfield	530756N 0025330W	0.9 NM within RMZ boundary
Mold Town <sup>(1)</sup>	530954N 0030731W	1.4 NM within RMZ boundary
Flint Bridge	531346N 0030400W	0.5 NM from RMZ boundary

<sup>(1)</sup> A494/A541 Chester Road roundabout outside of town

Check the Radio Mandatory Zone requirements before your flight.